



Installation Manual

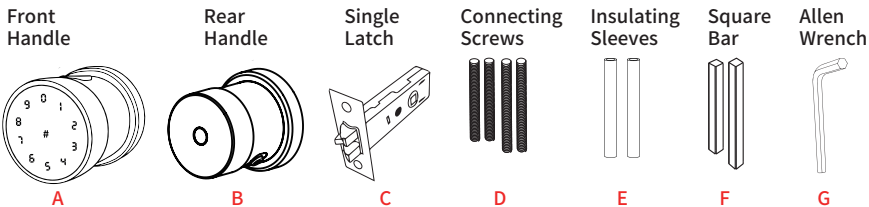

Step 1: Install single latch, and cut insulating sleeves according to door thickness. The length of insulating sleeve should be 8mm less than door thickness.


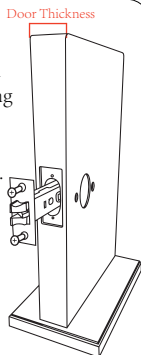


⚠ "E" must be installed

Insulating Sleeves



①

Step 2: Turn the Triangle "△" on Front Handle to position "S"

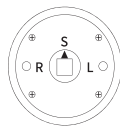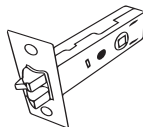

②



Step 3: Choose and install connecting screws in front handle according to door thickness, and put insulating sleeves upon connecting screws, and insert square bar into front handle.

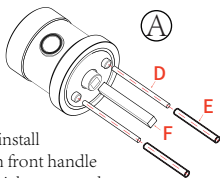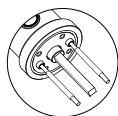


Door Thickness	Square Bar	Connecting screws
35mm~50mm	70mm	70mm
50mm~65mm	85mm	85mm

③


Step 4: Insert front handle into latch.

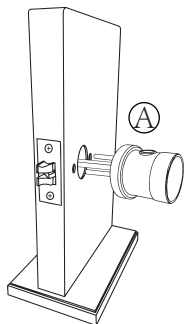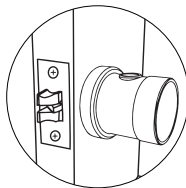

④

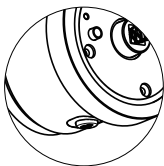

Step 5: Push the rear handle center button to remove the battery cover. Then connect with the front handle by connecting screw and make sure the secure lock button is downwards.

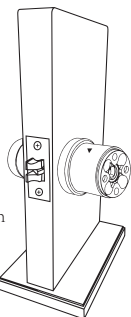


5




Step 6: Screw the inner hex nuts by allen wrench. (Inner hex nuts is inside of rear handle)


Note: Take turns screwing two connecting screws to avoid that one side of screw is too tight and the other side of screw is too loose.

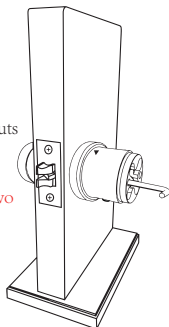

6

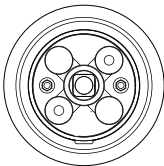


Step 7: Insert 4 AA batteries according to positive and negative pole.

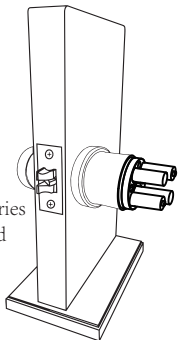

7

Step 8: Press the cover centre button and install it. Please make sure the cylinders A and B are align to the hole C and D.

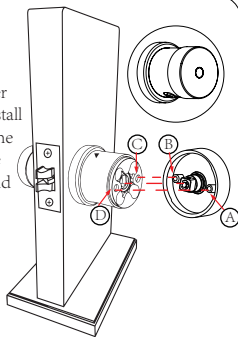

8